

EMERGENCY IGNITION JUMPER WIRE

For use when ignition switch or cable is shorted or fails to work.

- 1. Unscrew cable from the distributor.**
- 2. Screw emergency jumper into distributor.**
- 3. Remove red wire from coil that leads to ignition switch.**
- 4. Attach clip end of jumper to terminal on coil.**
- 5. The engine is now ready to start. To stop engine unclip jumper from coil.**