

A-3405-W Front Radius Rod Ball Spacer Washer

This spacer washer is be used to take up wear on the front radius rod ball. Use one or two washers as needed. Apply a little grease before installation.

This spacer washer is to be used with the **original style stamped steel rod ball socket** only, NOT the cast iron after-market set with the rubber ball. Over time oil will cause the rubber ball to become soft and allow lateral movement of the front axle which could lead to wheel shimmy. The original stamped steel type is best.
