HORN ROD KIT

TO REPAIR WIRE & CONTACTS

REMOVE ROD FROM STEERING COLUMN AS FOLLOWS: LOOSEN WIRE
BALE & REMOVE LOWER SWITCH & WIRING - REMOVE LOWER "U"
SHAPED RETAINER WASHER FROM SPIDER - PULL OUT ROD. FOR
CLOSED CARS WHERE ROD HITS TOP, LOOSEN FRAME & COLUMN
BOLTS TO LOWER COLUMN & PULL OUT BY SLIGHT HANDLING (DO
NOT KINK). TO REMOVE BUTTON, BEND UP (4) PRONGS UNDER
HEAD & REMOVE RETAINER, BUTTON, SPRING & GUIDE.

DISCARD OLD WIRE - LOWER INSULATOR & UNSOLDER CUP, INSERT NEW UPPER CONTACT THRU SPACER, (SEE VIEWS) INSERT STRIPPED END OF WIRE IN HOLE, CRIMP & SOLDER. INSERT WIRE THRU ROD, PULL TIGHT & CUT WIRE EXACTLY (1) INCH PAST END OF ROD.

REMOVE WIRE & STRIP INSULATION EXACTLY 1-3/8"
ON END. REINSTALL & INSERT LOWER INSULATOR &
LOWER TERMINAL CUP IN PLACE. DRILL OR PUNCH
HOLE IN LOWER BRASS CUP FOR WIRE. PULL TIGHT
AND FILL CUP WITH SOLDER. DO NOT OVERHEAT
& BURN INSULATOR. NOTE: IT WILL HELP TO
PRE-TIN THE LOWER TERMINAL CUP SEPERATELY.
CHECK OUT FOR ELECTRICAL SHORTING WITH TUBE.
CLEAN UPPER CONTACT AREAS FOR GOOD HORN
OPERATION AND REASEMBLE HORN BUTTON AND
RELATED PARTS. THE HORN & HORN ROD ARE LIVE
WIRE AND THE HORN BUTTON WHEN DEPRESSED
FROUNDS THE CIRCUIT TO THE HOUSING.





