
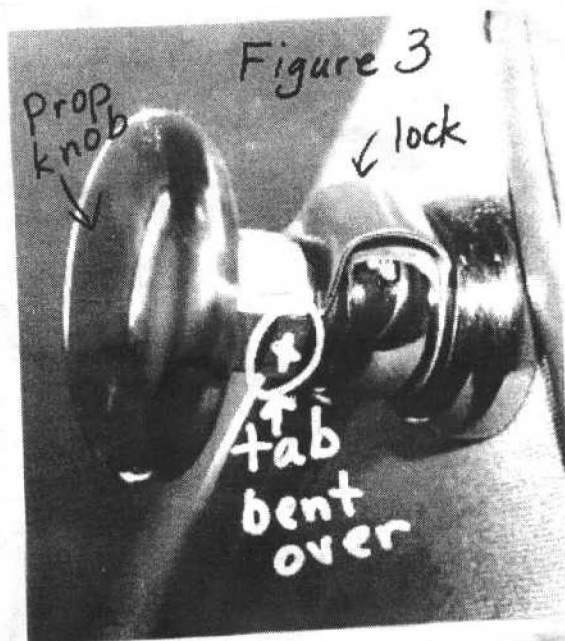
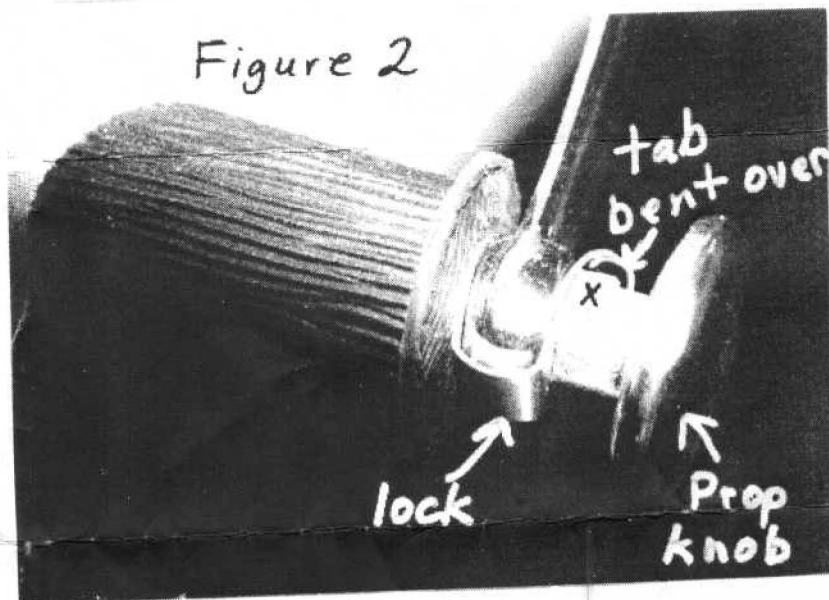


TECHNICAL TIP: Don't lose your landau irons!!!! These little locks secure your prop knobs from vibrating off. Figure 1 shows one before installation. In Figure 2 one has been installed on the lower landau iron bracket, sandwiched around the landau iron with the tabs folded over the prop knob's nut. Figure 3 shows one in position at the upper landau iron bracket. These little simple pieces could definitely help prevent a lot of damage and heartache from occurring if one were to lose those landau irons.

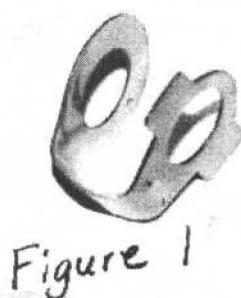

AUTO STUMPER

When was the first concrete road laid in the U.S.?

AUTO STUMPER ANSWER
Actually, the first concrete road was not for automobiles, it was for bicycles. By the late 1880s, bicycles had become very popular because of the development of the pneumatic tire and chain and sprocket drive. Pressure by cycle enthusiasts caused the establishment to the U.S. Office of Road Inquiry in 1893. And in that year, the first concrete road was laid in Bellefontaine, Ohio.
From Spht Rm and Intake & Exhaust NCR
AACA